BG412V

JLTRASTACK

User's Manual

Version 1.1 July 2004





ULTRASTACK BG412V

Dear Customer.


welcome to the team of ULTRASTACK users, and thank you very much for expressing your confidence in BEHRINGER products by purchasing the ULTRASTACK BG412V. Even though hooking up and operating the BG412V is very easy, we would still like to provide you with a brief description of this excellent speaker cabinet and its features.


- The ULTRASTACK can produce extreme sound pressure levels. Please note that high SPLs do not only result in listening fatigue but can also permanently impair your hearing.
- Please turn off the amp and disconnect it from the mains before connecting it to the speaker cabinet.
- Turn off the amp before changing the ULTRASTACK settings.
- Select stereo or mono operation and set the switch accordingly:

Set the ULTRASTACK to MONO to drive it from a single power amp. In this case, the speaker cabinet's impedance is 4 Ohms. Use the ULTRASTACK's INPUT connector to connect the speaker cable.

If you have two amplifiers or a stereo power amp, you can operate the BG412V in two-channel mode by setting the ULTRASTACK to STEREO. Then, the speaker's impedance is 2 x 8 Ohms. Connect the left channel of the power amp to LEFT, and the right channel to RIGHT.

- When connecting the BG412V to a tube power amp, please use the corresponding output(s) on your amp or set the impedance selector switch to the correct impedance after disconnecting the amp from the mains.
- Be sure to set amp impedance accordingly.
- Disconnect your amp from the mains before changing the impedance settings.
- Never use guitar or similar cables to operate the BG412V. Always use speaker cables with a minimum diameter of 2.5 mm (10 AWG).
- Never operate a tube amp without a load connected to it. If the impedance of the connected speaker cabinet fails to match the amplifier's impedance, the amp could be damaged. Please refer to the operating instructions accompanying your amplifier.

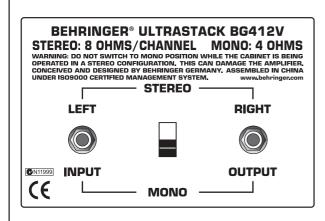

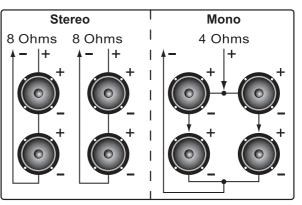

Rear panel Wiring

Specifications

Speaker system

12" BUGERA™ Vintage Guitar Speaker type

Series, 4 Ohms, 50 Watts

200 Watts / 100 Watts

4 Ohms / 8 Ohms

4 x 12"

Power rating (mono / stereo) Impedance (mono / stereo)

Dimensions (W x H x D) approx. 30" x 30" x 15" (762 mm x 762 mm x 382 mm)

approx. 85 lb (38.6 kg)

Weight

BEHRINGER is constantly striving to maintain the highest professional standards. As a result of these efforts, modifications may be made from time to time to existing products without prior notice. Specifications and appearance may differ from those listed or illustrated.

ULTRASTACK BG412V

WARRANTY

§ 1 WARRANTY CARD/ONLINE REGISTRATION

To be protected by the extended warranty, the buyer must complete and return the enclosed warranty card within 14 days of the date of purchase to BEHRINGER Spezielle Studiotechnik GmbH, in accordance with the conditions stipulated in § 3. Failure to return the card in due time (date as per postmark) will void any extended warranty claims. Based on the conditions herein, the buyer may also choose to use the online registration option via the Internet (www.behringer.com or www.behringer.de).

§ 2 WARRANTY

- 1. BEHRINGER (BEHRINGER Spezielle Studiotechnik GmbH including all BEHRINGER subsidiaries listed on the enclosed page, except BEHRINGER Japan) warrants the mechanical and electronic components of this product to be free of defects in material and workmanship for a period of one (1) year* from the original date of purchase, in accordance with the warranty regulations described below. If the product shows any defects within the specified warranty period that are not excluded from this warranty as described under § 4, BEHRINGER shall, at its discretion, either replace or repair the product using suitable new or reconditioned parts. In the case that other parts are used which constitute an improvement, BEHRINGER may, at its discretion, charge the customer for the additional cost of these parts.
- 2. If the warranty claim proves to be justified, the product will be returned to the user freight prepaid.
- 3. Warranty claims other than those indicated above are expressly excluded.

§ 3 RETURN AUTHORIZATION NUMBER

- 1. To obtain warranty service, the buyer (or his authorized dealer) must call BEHRINGER (see enclosed list) during normal business hours **BEFORE** returning the product. All inquiries must be accompanied by a description of the problem. BEHRINGER will then issue a return authorization number.
- 2. Subsequently, the product must be returned in its original shipping carton, together with the return authorization number to the address indicated by BEHRINGER.
 - 3. Shipments without freight prepaid will not be accepted.

§ 4 WARRANTY REGULATIONS

- 1. Warranty services will be furnished only if the product is accompanied by a copy of the original retail dealer's invoice. Any product deemed eligible for repair or replacement under the terms of this warranty will be repaired or replaced.
- 2. If the product needs to be modified or adapted in order to comply with applicable technical or safety standards on a national or local level, in any country which is not the country for which the product was originally developed and manufactured, this modification/adaptation shall not be considered a defect in materials or workmanship. The warranty does not cover any such modification/adaptation, irrespective of whether it was carried out properly or not. Under the terms of this warranty, BEHRINGER shall not be held responsible for any cost resulting from such a modification/adaptation.

- 3. Free inspections and maintenance/repair work are expressly excluded from this warranty, in particular, if caused by improper handling of the product by the user. This also applies to defects caused by normal wear and tear, in particular, of faders, crossfaders, potentiometers, keys/buttons, tubes, guitar strings, illuminants and similar parts.
- 4. Damages/defects caused by the following conditions are not covered by this warranty:
- improper handling, neglect or failure to operate the unit in compliance with the instructions given in BEHRINGER user or service manuals.
- connection or operation of the unit in any way that does not comply with the technical or safety regulations applicable in the country where the product is used.
- damages/defects caused by force majeure or any other condition that is beyond the control of BEHRINGER.
- 5. Any repair or opening of the unit carried out by unauthorized personnel (user included) will void the warranty.
- 6. If an inspection of the product by BEHRINGER shows that the defect in question is not covered by the warranty, the inspection costs are payable by the customer.
- 7. Products which do not meet the terms of this warranty will be repaired exclusively at the buyer's expense. BEHRINGER will inform the buyer of any such circumstance. If the buyer fails to submit a written repair order within 6 weeks after notification, BEHRINGER will return the unit C.O.D. with a separate invoice for freight and packing. Such costs will also be invoiced separately when the buyer has sent in a written repair order.

§ 5 WARRANTY TRANSFERABILITY

This warranty is extended exclusively to the original buyer (customer of retail dealer) and is not transferable to anyone who may subsequently purchase this product. No other person (retail dealer, etc.) shall be entitled to give any warranty promise on behalf of BEHRINGER.

§ 6 CLAIM FOR DAMAGES

Failure of BEHRINGER to provide proper warranty service shall not entitle the buyer to claim (consequential) damages. In no event shall the liability of BEHRINGER exceed the invoiced value of the product.

§ 7 OTHER WARRANTY RIGHTS AND NATIONAL LAW

- 1. This warranty does not exclude or limit the buyer's statutory rights provided by national law, in particular, any such rights against the seller that arise from a legally effective purchase contract.
- 2. The warranty regulations mentioned herein are applicable unless they constitute an infringement of national warranty law.
- * Customers in the European Union please contact BEHRINGER Germany Support for further details.

Technical specifications and appearance subject to change without notice. The information contained herein is correct at the time of printing. BEHRINGER® accepts no liability for any loss which may be suffered by any person who relies either wholly or in part upon any description, photograph or statement contained herein. Colours and specification may vary slightly from product. Products are sold through our authorised dealers only. Distributors and dealers are not agents of BEHRINGER® and have absolutely no authority to bind BEHRINGER® by any express or implied undertaking or representation. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording of any kind, for any purpose, without the express written permission of BEHRINGER Spezielle Studiotechnik GmbH. BEHRINGER® is a registered trademark.