



SPLIT

To split the keyboard in two parts all you do is, pressthekeythatyouwishtobethedividingpointonthe keyboard then press the switch «SPLIT». Obviously once split, the keyboard is separated in two distinct parts, the LOWER part will go through channel MIDI 1 and the UPPER part through channel MIDI 2. If you press only «SPLIT» and no key the entire keyboard will transmit through MIDI 1

TRANSPOSER

LOWER: to transpose the LOWER part of the keyboard press the note you want to correspond to initial A then press the switch «LOWER». UPPER: to transpose the UPPER part of the keyboard press the note you want to correspond to the first key of the split then press «UPPER». When you split, transposition will be automatic. the lower part will increase by one octave and the upper part decreases by one octave.

TECHNICAL DATA

Supply will require a standard adapter with a variable continuous output voltage ranging 9 to 12 V and 350 mA current minimum.

The keyboard includes two midioutputs to pilot other instruments. There is also a F00T-SWITCH jack to which you can connect an OFF-ON pedal which will enable a sustain effect through midi of the popalar synthesizers and expanders on the market.

