

Step Sequencer/Synthesizer

Version 1.0

© 2019 by Ben Martin and Björn Arlt @ Full Bucket Music <u>https://www.fullbucket.de/music</u>

BARK 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 CHAIN 0	FULL BUCI PROGRAM 00 v PROGRAM NAME	1.0.0	'MENU	MIDI			ILATOR	F _ M ON	CUTOFF	RESO 	FILTER ENV O.44	TRACK	VELO 	Multi	CAY Env	- Di	
PTCH 0 4 7 9 3 5 8 12 9 7 4 0 9 7 4 12 OCTAVE -1 <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th>1 2</th> <th>3</th> <th>4 5</th> <th>6 7</th> <th>8</th> <th>9 10</th> <th>11</th> <th>12 13</th> <th>14 1</th> <th></th>								1 2	3	4 5	6 7	8	9 10	11	12 13	14 1	
PTCH 0 4 7 9 -3 -5 -8 -12 9 7 4 0 9 7 4 12 OCTAVE -1	STEP / SKIP	Concerned in	- 02	03	04	05	05	01	08	09	10		- 12	13	14	- 15	16
OCTAVE -1	PITCH -	340	-0-	G	-0+			大大	115	-9-	Ö	-	-0-	-6-	Ó	-Ö	
VELOCITY 100	OCTAVE	-	- -1		-	-X)-	-	-0	-)				-0-				
OKAL 0.50	VELOCITY -	100	100	100	100	100	100	100	100	100	100	100	100	100	100	100	100
64 <td< th=""><th>GATE</th><th>0.50</th><th>0.50</th><th>0.50</th><th>0.50</th><th>0.50</th><th>0.50</th><th>0.50</th><th>0.50</th><th>0.50</th><th>3-6</th><th>All</th><th>-</th><th>1 des</th><th>10</th><th>0.50</th><th>0.50</th></td<>	GATE	0.50	0.50	0.50	0.50	0.50	0.50	0.50	0.50	0.50	3-6	All	-	1 des	10	0.50	0.50
Modulation Wheel Image: Constraint of the state of	Pan	300	Sel	3-A	3-5	Set	30	20	Set.	-	1	- 64	-	1	1	3.0	64
MUTE TEMPO BPM SYNC DIV SWING 165 0 1/8 185 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	Modulation Wheel	-	1	-	- Ø	1	-	1	-	1	-	- Ø	1		-	-	-
	MUTE -																
66% MODE	темро ВРМ 16 9			Ġ	►					•	• •	•	_	• •		C3	CHANNEL 1

VST is a trademark of Steinberg Media Technologies GmbH Windows is a registered trademark of Microsoft Corporation

Table of Contents

Introduction	3
Background	3
Sequencer	
Sequencer Playback	
Sequencer Steps	
Sequencer Recording	
Helpers	5
Bank Chaining	5
Synthesizer	5
Performance Controls	6
Program Menu	6
Context Menu	6
MIDI Learn	7
Audio / MIDI Setup (Standalone App Only)	7
A Word About Using SequencAir	
Frequently Asked Questions	9

Introduction

SequencAir is a software step sequencer/synthesizer standalone application and VST plug-in for Microsoft Windows and Apple macOS. It is written in native C++ code for high performance and low CPU consumption. The main features are:

- 16 chainable banks
- 16 sequencer steps per bank
- Individual controls for Note, Octave, Velocity, Gate, Skip, Mute plus two MIDI CCs or synth parameters per step
- Sync-to-host and Swing functions
- Optional Start/Stop/Transpose by MIDI Note command
- Additional built-in monophonic synthesizer
- Straightforward user interface
- MIDI Learn all parameters can be controlled by MIDI CC
- Plug-in supports Windows and macOS (32 bit and 64 bit)

Background

One day before Christmas Eve 2018, I (Björn) got a mail from Ben Martin from Portugal. Ben proposed the idea of an enhanced step sequencer VST plugin, much in the style of classic analog gear but with more knobs ©. What Ben did not know was that some years ago I already had created a prototype of such a machine but somehow dropped the idea. While my approach added a very simple synthesizer to it, Ben's sequencer part was more elaborated than my original idea.

After some mails back and forth, the basic concept was settled and I started development. Ben suggested a "matrix-style" sequencer, and it took just a few iterations until *SequencAir* was literally ready for production. During this process, Ben tested the plugin and proposed some great ideas that directly went into the design. He also created the preset programs 16 to 27.

Now *SequencAir* surely is not a plugin for the masses, and I think you should be a fan of old-school analog sequencers to fully appreciate its concept. The full power becomes apparent when you start playing with it in real time and replace the crappy built-in synth with the software or hardware instrument of your choice.

Enjoy and have fun!

Sequencer

Per program, *SequencAir* features 16 banks of 16 steps where each step provides individual controls for Pitch, Octave, Velocity, Gate Time, Mute and two MIDI CC and/or synthesizer parameter controls. Furthermore, each step can be skipped which allows the programming of non-standard signatures.

Using the *BANK* switches, the current sequencer bank will be selected for editing. When clicking the *CHAIN* buttons, the checked banks (yellow-lit *CHAIN* button) themselves will be played in sequence.

Sequencer Playback

Apart from *Tempo* (which can by synchronized to the host's tempo), *DIV* (clock division i.e. note length per sequencer step) and *Swing* (amount of "shifting" evennumbered steps with respect to odd-numbered steps), *SequencAir* offers various play modes and options.

Mode	Symbol	Description
Forward	•	Plays forward from step 1 to step 16
Reverse	•	Plays backwards from step 16 to 1
Forward-Reverse	•	Plays forward and then again backwards
Reverse-Forward	•	Plays backwards and then again forward
Random	RND	Plays random steps

Option	Symbol	Description
Reset/Play	RESET /PLAY	Resets to first step before starting to play
Loop		Loops the playback
Start on Note On	5	Starts playback on MIDI Note On
Stop on Note Off	J≡.	Stops playback on MIDI Note Off
Transpose Note	\$\$	Transposes the current note on MIDI Note On
Pivot Key	_	Base key for the sequencer steps
MIDI Channel	_	MIDI channel for sending MIDI events

Sequencer Steps

As stated above, each step has a control for Pitch, Octave, Velocity, Gate time, Mute and two assignable controls for MIDI CC or synthesizer parameters.

- You can entirely skip a step by clicking on its number display at the top (the display the shows two bars instead of the step number).
- A gate time value of 1.00 will be interpreted as a tie and allows for legato playback.
- A red LED right underneath the step number display indicates the currently active note. A blue LED indicates that the active step belongs to a *different bank* than the selected bank.

Sequencer Recording

After pressing the red *Record* button you can "record" the 16 steps of the currently selected bank. Note that only the note pitch and velocity of the MIDI data sent to *SequencAir* will be recorded.

Helpers

Clicking on a button to the left of the step rows (*Pitch*, *Octave*, etc.) will open a context menu that provides some helper functions to set the values of the corresponding step controller rows. Note that in case of the two assignable controllers you have to do a right-click to open the context menu.

Bank Chaining

Using the *CHAIN* buttons you can select banks to be chained during playback. The LED right underneath the *CHAIN* buttons indicate which bank is playing. A blue LED indicates that a different bank than the selected bank is currently active.

Synthesizer

The Synthesizer section features a very primitive synth with one oscillator, one filter and a simple envelope. It is just there so that you do not need to add a subsequent MIDI or VST instrument when you want to setup a funky sequence...

Note that you have to switch the synth ON if you want to hear it!

Performance Controls

Program Menu

If you know my other plug-ins then there will be no surprises: To select one of the 64 patches just click on the program number, and edit its name by clicking in the text field.

Context Menu

When clicking on the *Menu* button, a context menu opens with the following options:

Copy Program	Copy current program to internal clipboard				
Paste Program	Paste internal clipboard to current program				
Load Program	Load a program file containing a patch to the current program				
Save Program	Save the current program to a program file				
Load Bank	Load a bank file containing 64 patches into SequencAir				
Save Bank	Save the 64 patches to a bank file				
Init Program	Initialize the current program				
Reload Configuration	Reload the configuration file (see section MIDI Learn)				
Save Configuration	Saves the configuration file (see section <i>MIDI Learn</i>)				
Check Online for Update	When connected to the Internet, this function will check if a newer version of <i>SequencAir</i> is available at fullbucket.de				
Visit fullbucket.de	Open fullbucket.de in your standard browser				
Audio / MIDI Setup (standalone app only)	Configure Audio / MIDI interface (see section Audio / MIDI Setup (Standalone App Only))				

MIDI Learn

Every parameter of *SequencAir* can be controlled by one MIDI controller. This is also true for the BANK and CHAIN buttons and allows for cool performances using your favorite MIDI controller.

If you want to change the assignment of MIDI controller (CC; MIDI Control Change) to SequencAir parameter the MIDI Learn function comes in quite handy: Just click the LEARN button on SequencAir's control panel (button turns yellow) and wiggle both the MIDI controller and the parameter you want to assign (you can abort *LEARN* by clicking the button again). To save the controller assignments use "Save Configuration" in the *Menu* context menu (see previous section); they are stored in the sequencair.ini configuration file. The exact location of this file depends on your operating system and will be displayed when you click on "Reload" or "Save Configuration".

If you want to unlearn the assignment, right-click the *LEARN* button (the label now reads "UNLEARN"). Now wiggle the MIDI controller or the parameter that you want to unlearn.

Audio / MIDI Setup (Standalone App Only)

If you are using the standalone application of *SequencAir* you have to configure the Audio / MIDI settings first (i.e. which audio / MIDI driver you are using, the sample rate etc.). This configuration is also saved in the sequencair.ini file (see above).

For the VST version of SequencAir all this stuff is handled by your DAW host and can be omitted.

Audio / MIDI Setup						
Audio Device Settings Driver Type ASIO	IO Vector Size					
Output Device ASIO4ALL v2	Signal Vector Size					
Output 1 (L) Output 2 (R)	Sampling Rate					
	ASIO Config					
MIDI Device Settings						
Input Device	Input Channel					
off 🗨	al 💌					
Output Device	Output Channel					
Apply	OK Cancel					

A Word About Using SequencAir

By Ben Martin

As stated above, the *SequencAir's* internal synth is only there for rough and immediate dirty programming of your ideas. Probably you'd better use external VST instruments to bring your ideas to life.

Many of the included preset examples should be routed to external VST instruments and (if needed) audio effects to bring the sequences to another level and closer to the originals. For instance, the sequence "On the Run" by Pink Floyd uses the built-in synth only for hit-hats. The filter modulation and the melody line is also present, so to fully enjoy this sequence you need to route *SequenceAir* to an external VST synthesizer and mix it with *SequenceAir's* internal synth hit-hats. If preferred you can also route this sequence to two different external VST instruments, one to play the melody and the one to play the hit-hats while disabling *SequenceAir's* internal synth completely.

The two last rows of the sequencer panel (normally assigned to PAN and the Modulation wheel) represent MIDI Control Changes pre-programmed to a specific MIDI-CC. Instead, you can route these rows to any parameter of your favorite external VST instrument, but this is not a requirement since you can always program the parameters in the VST using your own personal preferences (manually, by DAW automation etc.).

Live and flexible performances are possible with *SequencAir* when taking advantage of the *MIDI Learn* function. This feature allows you to navigate in realtime trough the 16 pre-programmed sequence banks with a simple touch of a hardware MIDI controller button.

Frequently Asked Questions

How do I install SequencAir (*Windows VST 32/64 bit version*)?

Just copy the file sequencair.dll (32 bit) or sequencair64.dll (64 bit) from the ZIP archive you have downloaded to your system's or favorite DAW's VST plug-in folder. Your DAW should automatically register the *SequencAir* VST plug-in the next time you start it.

How do I install SequencAir (Windows App 32/64 bit version)?

Just copy the file sequencair.exe (32 bit) or sequencair64.exe (64 bit) from the ZIP archive you have downloaded to any folder and start it.

How do I install SequencAir (*Mac VST/App universal 32/64 bit*)?

Locate the downloaded PKG package file sequencair_1_0_0_mac.pkg in Finder (!) and do a right- or control-click on it. In the context menu, click on "Open". You will be asked if you really want to install the package because it comes from an "unidentified developer" (me ⁽ⁱ⁾). Click "OK" and follow the installation instructions.

What is the plug-in ID of SequencAir?

The ID is **fbsQ**.

Can I save the MIDI controller/parameter assignments?

Yes, by using "Save Configuration" in the *Menu* context menu (see section *Context Menu*).

How do I know if a new version of SequencAir *is available?*

When connected to the Internet, open the Options menu (see section *Context Menu*) by clicking the disk icon and select the entry "Check Online for Updates". If a new version of *SequencAir* is available on fullbucket.de the respective information will be shown in a message box.

Why is there no Mac Audio Unit (AU) version of SequencAir?

This is because of the missing MIDI send capabilities of AU prior to version 3. oxtimes