


ProKeys Sono 88

The function keys in Edit Mode are the rightmost five octaves on ProKeys Sono 88 from C2 to C7.

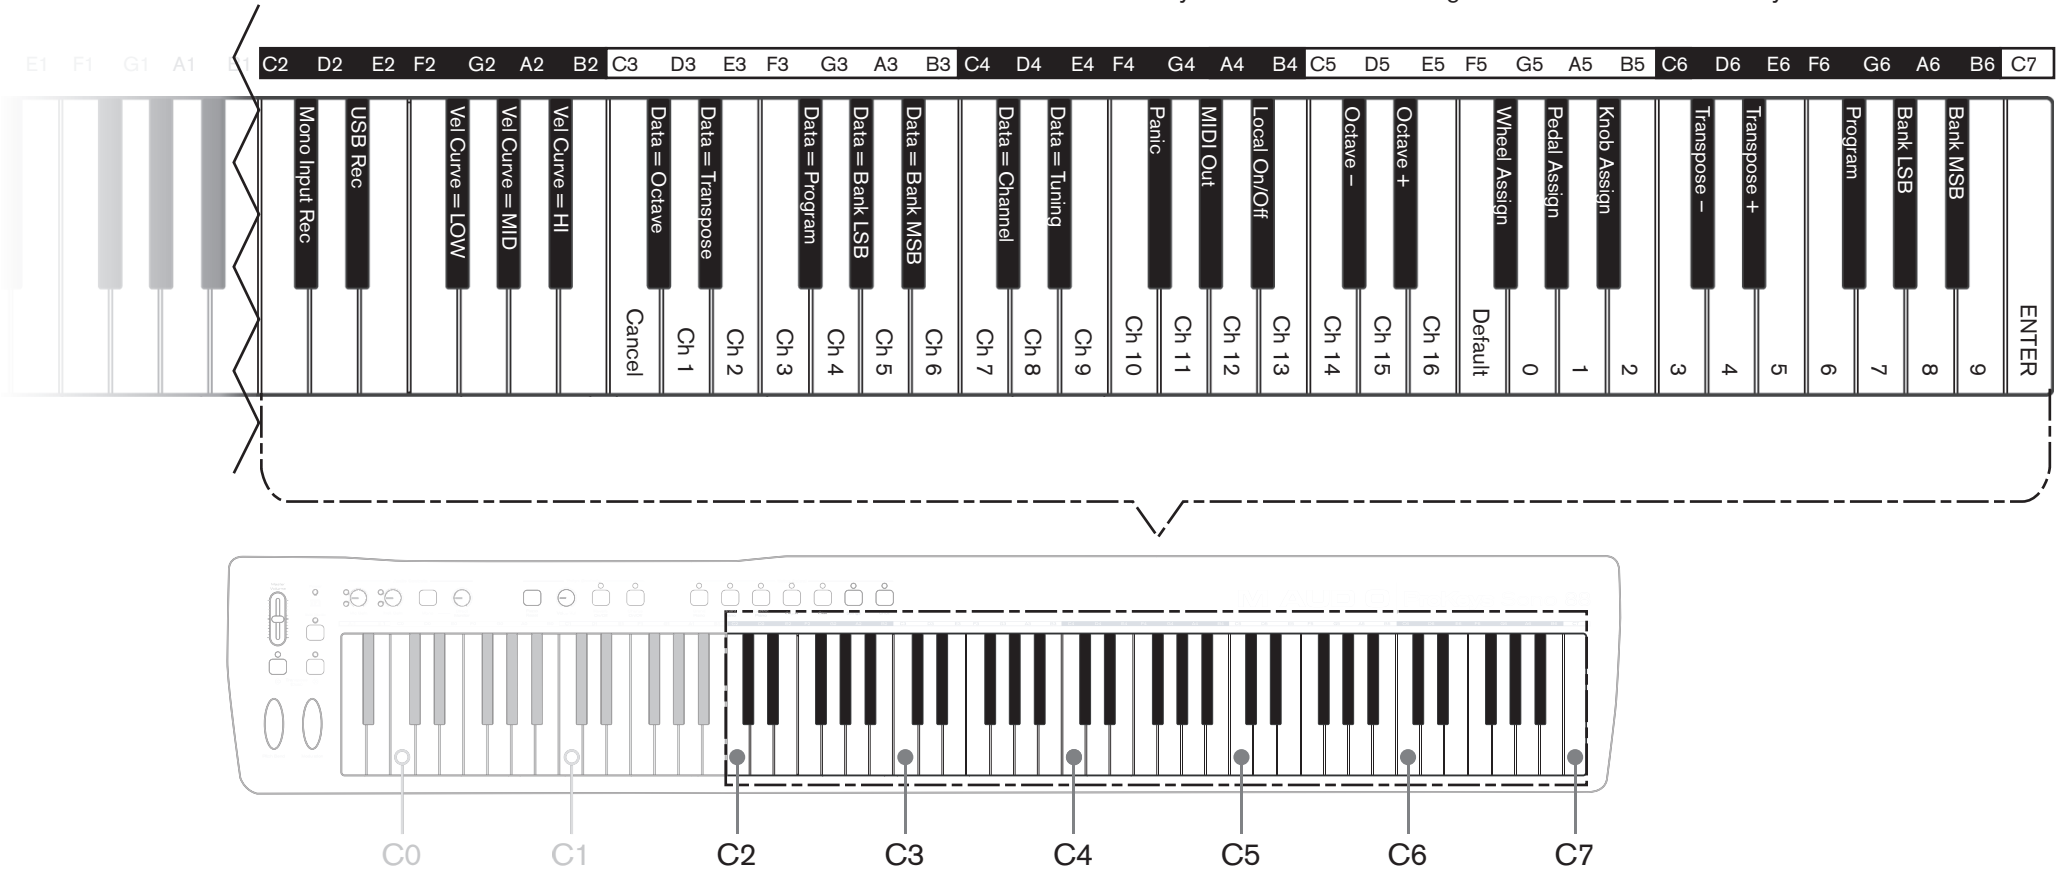

Select **"Fit to Page"** in the print preferences, or your printer's equivalent setting for this feature, before printing this document.