

Roland

MUSIC STYLE SUPER CARD

MSL-15

OWNER'S MANUAL

Roland MUSIC STYLE SUPER CARD MSL-15 ▲ U/F ▲ MUSIC STYLE CARD

<p>• TN-SC1-01</p> <p>Country</p> <ol style="list-style-type: none"> 1. Bluegrass 2. Tex./Mex. 3. Country Waltz 4. Country Rock 	<p>• TN-SC1-03</p> <p>70's and 80's</p> <ol style="list-style-type: none"> 1. Euro Pop 2. Rap 3. Funk 3 4. Big Rock 	<p>• TN-SC1-05</p> <p>Around The World 2</p> <ol style="list-style-type: none"> 1. Calypso 2. Reggae 2 3. Ska 4. Caribbean 	<p>• TN-SC1-07</p> <p>Latin</p> <ol style="list-style-type: none"> 1. Samba 2 2. Mambo 3. Beguine 4. Paso Doble 	<p>• TN-SC1-09</p> <p>Japanese Pops</p> <ol style="list-style-type: none"> 1. Japanese Pop 1 2. Japanese Pop 2 3. Japanese Pop 3 4. Japanese Pop 4 	<p>• TN-SC1-11</p> <p>Dance 1</p> <ol style="list-style-type: none"> 1. Slow Waltz 2 2. Slow Rock 3 3. Tango 2 4. Beguine 2 	<p>• TN-SC1-13</p> <p>Dance 3</p> <ol style="list-style-type: none"> 1. Boogie 2 2. Rock'n Roll 3 3. Shuffle 2 4. Rag Time 	<p>MSL-15</p> <p>Select Card No.</p> <p>[EXIT-CARD] or [EXIT]</p> <p>-----</p> <p>KEYBOARD</p> <p>Press [CARD]</p> <p> </p> <p>Select Style No.</p> <p>-----</p> <p>Be sure to press the [CARD] button on your keyboard after you have selected a card number (01-14 or EXT) on the MSL-15.</p>
<p>• TN-SC1-02</p> <p>50's and 60's</p> <ol style="list-style-type: none"> 1. M. Town 2. Rock'n Roll 2 3. Mexican Rock 4. Slow Soul 	<p>• TN-SC1-04</p> <p>Around The World</p> <ol style="list-style-type: none"> 1. March 2 2. Waltz 3 3. Polka 2 4. Foxtrot 	<p>• TN-SC1-06</p> <p>Piano Bar</p> <ol style="list-style-type: none"> 1. Slow Waltz 2. Standard 3. Ballad 2 4. Ballad 3 	<p>• TN-SC1-08</p> <p>Enka</p> <ol style="list-style-type: none"> 1. Enka 1 2. Enka 2 3. Enka 3 4. Enka 4 	<p>• TN-SC1-10</p> <p>Easy Eight</p> <ol style="list-style-type: none"> 1. Swing 2 2. 8 Beat 3 3. 16 Beat 3 4. Disco 3 5. Waltz 4 6. 2 Beat 7. Latin Beat 8. Slow Rock 2 	<p>• TN-SC1-12</p> <p>Dance 2</p> <ol style="list-style-type: none"> 1. Bossanova 2 2. Samba 3 3. Lambada 4. Son 	<p>• TN-SC1-14</p> <p>Dance 4</p> <ol style="list-style-type: none"> 1. 16 Beat 4 2. Blues 3. Slow Swing 4. Slow Soul 2 	

01 02 03 04 05 06 07 08 09 10 11 12 13 14

EXT CARD

ON - OFF - POWER

DC IN -

USE BOSS PSA ADAPTOR ONLY

Thank you for purchasing the Roland Super Card MSL-15.

The MSL-15 is a superb Music Style expander that includes all the Music Styles (60 different styles) of the 14 Music Style Cards which have been released by Roland. This means that you can access any Music Style just by connecting the MSL-15 to a compatible device. For a detailed explanation of how to play the MSL-15's Music Styles, read the owner's manual of the device you will be using with the MSL-15.

Note: To use the MSL-15, you will need a BOSS AC adaptor (PSA-series:sold separately).

©1990 by Roland Corporation

 
All rights reserved. No part of this publication may be reproduced in any form without the permission of Roland Corporation.

Compatible Models

The MSL-15 can be used with the following models:


Intelligent Synthesizer	E-5/E-20/E-30
Intelligent Arranger	PRO-E
Real Time Arranger	RA-50
Intelligent Arranger	CA-30
Digital Keyboard	KR-100/KR-500/KR-3000

Panel Description

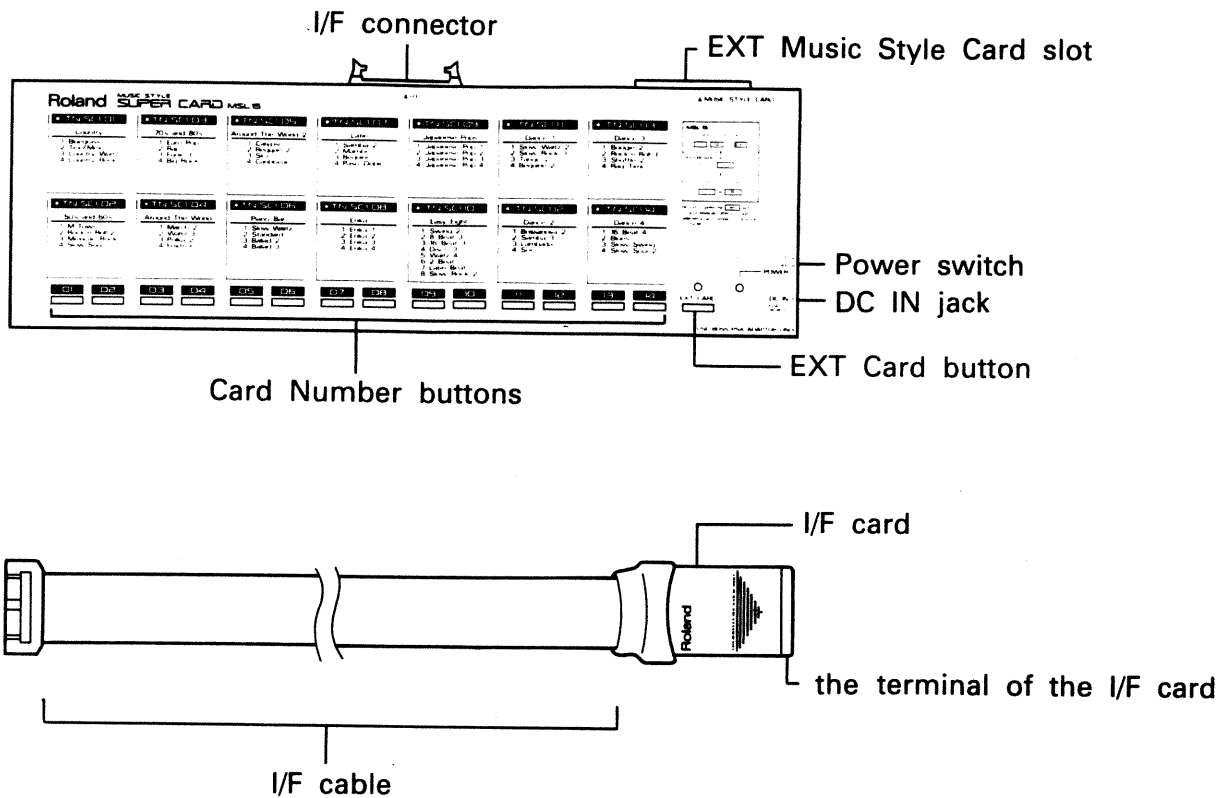

■ Connection

Before you make any connections, be sure that all the units are switched off.

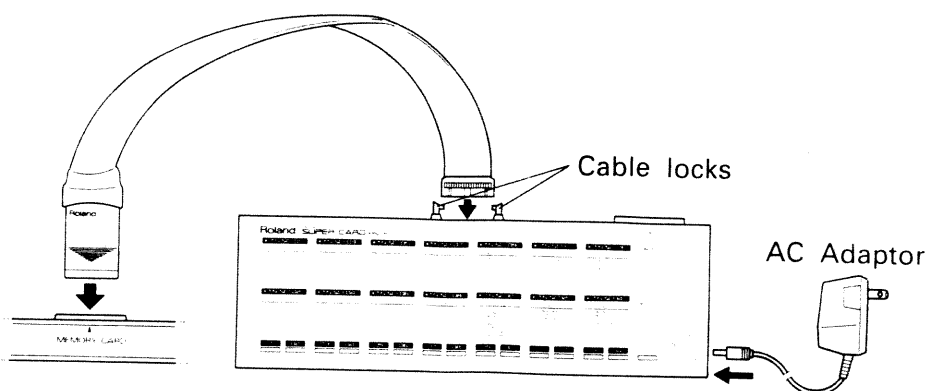


- ① Connect the AC adaptor (BOSS PSA-series:sold separately) to the DC IN jack.
 - ② Connect the supplied I/F cable to the I/F connector on the MSL-15. Insert the I/F cable firmly into the I/F connector on the MSL-15. By doing so, the cable locks on either side of the connector will be engaged.
- * To disconnect the I/F cable, place a thumb on each cable lock and gently push the ends of each lock toward their respective ends of the unit.**
- ③ Insert the I/F card (arrow side up) firmly to the Music Style Card slot of the other device.

Note: Please handle the I/F card and I/F cable gently. Do not touch the terminal of the I/F card with your fingers or allow it become wet or dirty. Damage to the unit may otherwise result.

■ Installation

When using the E-5, E-20, E-30 or KR-100:
Lean the MSL-15 on the Music rest.

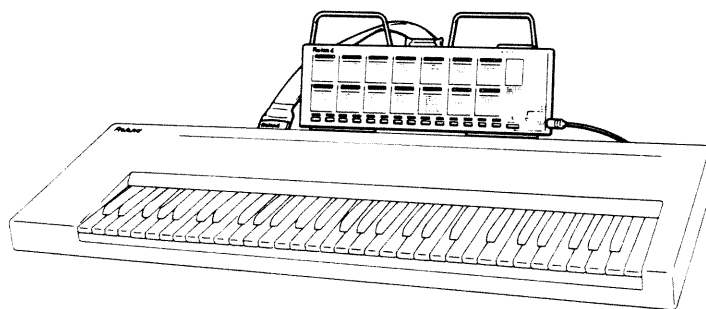


When using the KR-500 or KR-3000:

Remove the Music rest and place the MSL-15 on the top panel of your keyboard.


■ How to select a Music Style on the MSL-15

- ① Switch on the device connected to the MSL-15, and then turn on the MSL-15.
- ② Press any of the MSL-15's Card Number buttons (01-14) that corresponds to the Music Style you want. The corresponding LED will be light.

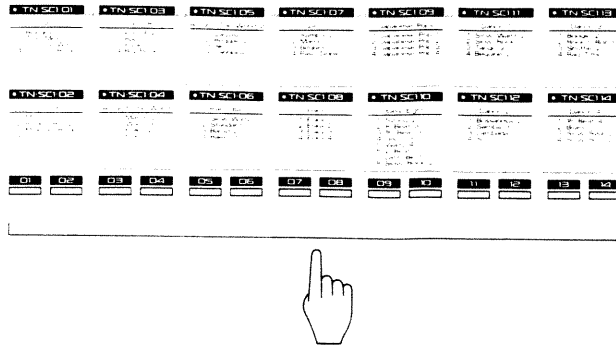


When the MSL-15 is switched on, 01 (TN-SC1-01:Country) will be automatically selected.

- ③ Press **CARD** on the connected device.

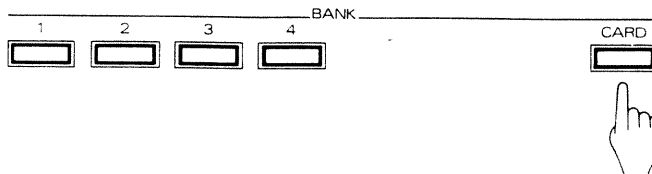

- ④ Press any of the Style (Rhythm) Number buttons (1-8) on the connected device you like. It will indicate the number, name and preset tempo of the selected Music Style (Rhythm) in the display.

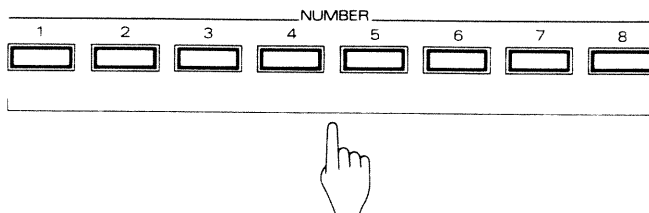

* The E-5 is not provided with a display, and cannot indicate this information.

The Style performance should be set exactly the same as when it is played with a Music Style Card.

* When you wish to continue and select other Music Styles in the MSL-15, be sure to press **CARD** after the relevant Card Number button has been pressed.


Example: Selecting “Lambada”

- ① The “Lambada” Music Style is stored in Dance 2 (TN-SC1-12). Press Card Number button 12.
- ② Press **CARD** on the connected device.
- ③ “Lambada” is the third Music Style in Dance 2. Press Number button 3 (or 7) on the connected device, and the Lambada Music Style will appear in the display.

■ How to use a Music Style Card

You can also use an optional Music Style Card with the MSL-15.

- ① Insert your Music Style Card into the EXT Music Style Card slot on the MSL-15.

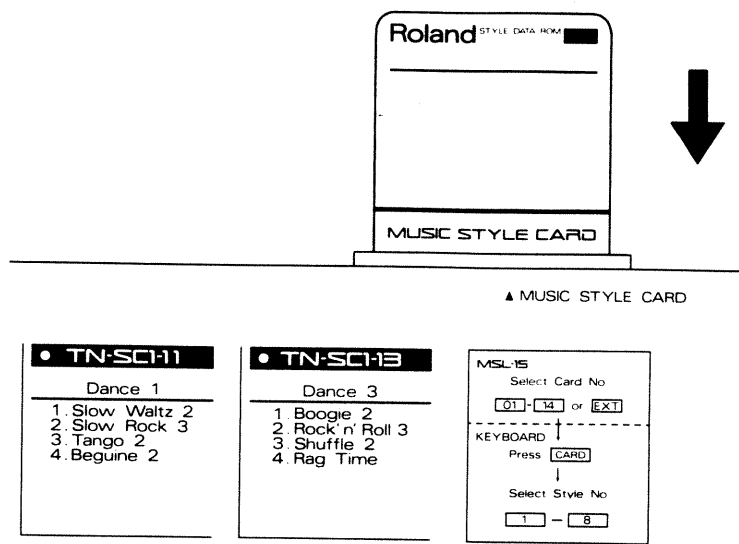

- ② Press **EXT CARD**.
- ③ Press **CARD** on the connected device.
- ④ Press one of the Number buttons (1-8) on the connected device.

■ Error Messages

If you operate the MSL-15 incorrectly or if it malfunctions, one of the following error messages will appear in the display of the connected device (except for the E-5). When this occurs, the situation can be corrected by following the directions under "what to do":

CARD NOT READY

Possible Cause 1: The I/F Card is not correctly connected.

What to do : Connect the I/F card correctly and securely, then repeat the procedure.

Possible Cause 2: The MSL-15 is switched off.

What to do : Switch the MSL-15 on and repeat the procedure.

Possible Cause 3: You have pressed **EXT CARD** without any card in the EXT Music Style Card slot.

What to do : Insert a card and repeat the procedure.

ILLEGAL CARD !!

Possible Cause 1: The I/F Card is not correctly connected.

What to do : Connect the I/F Card correctly and repeat the procedure.

Possible Cause 2: When you are using the E-20, sometimes the data can not be read correctly (this very rarely occurs, however).

What to do : Switch off the E-20 (while leaving the connections untouched), then switch it on again.

Possible Cause 3: You have inserted a card which is not a Music Style Card into the EXT Music Style Card slot and then pressed **EXT CARD**.

What to do : Remove the card. Insert a Musical Style card, then repeat the procedure.

■ Specifications

- Internal Music Styles TN-SC1-01 to 14 (total of 60 different styles)
- Connectors I/F connector
 EXT Music Style Card slot
- Dimensions 420 (W) x 147 (D) x 26 (H) mm /
 16-9/16" x 5-13/16" x 1-1/4"
- Weight 1.4kg / 3 lbs. 1 oz.
- Power Supply DC 9V : AC Adaptor
- Consumption 40mA
- Accessories I/F Cable
 Owner's Manual
- Options AC Adaptor : BOSS PSA-120 (120V)
 PSA-220 (220V)
 PSA-240A (240V)
 (Depending on the voltage system in your country.)

* Specifications are subject to change without notice.

■ Important Notes

Be sure to use only the BOSS AC-adaptor (PSA-series:sold separately). Use of any other power adaptor could result in damage, malfunction, or electric shock.

[Power Supply]

- When making any connections with other devices, always turn off the power to all equipment first; this will help prevent damage or malfunction.
- The power supply required for this unit is shown on its nameplate. Ensure that the line voltage of your installation meets this requirement.
- Avoid damaging the power cord; do not step on it, place heavy objects on it etc.
- If the unit is to remain unused for a long period of time, unplug the power cord.

[Placement]

- Do not subject the unit to temperature extremes (eg. direct sunlight in an enclosed vehicle). Avoid using or storing the unit in dusty or humid areas or areas that are subject to high vibration levels.

[Maintenance]

- For everyday cleaning wipe the unit with a soft, dry cloth (or one that has been slightly dampened with water). To remove stubborn dirt, use a mild neutral detergent. Afterwards, be sure to wipe the unit thoroughly with a soft, dry cloth.
- Never use benzene, thinners, alcohol or solvents of any kind, to avoid the risk of discoloration and/or deformation.

[Additional Precautions]

- Protect the unit from strong impact.
- Do not allow objects or liquids of any kind to penetrate the unit. In the event of such an occurrence, discontinue use immediately. Contact qualified service personnel as soon as possible.
- Should a malfunction occur (or if you suspect there is a problem) discontinue use immediately. Contact qualified service personnel as soon as possible.
- To prevent the risk of electric shock, do not open the unit or its AC adaptor.

Information

● When you need repair service, call your local Roland Service Station or the authorized Roland distributor in your country as shown below.

U. S. A.

Roland Corp US
7200 Dominion Circle
Los Angeles, CA. 90040 - 3647
U. S. A.
☎ (213)685 - 5141

CANADA

Roland Canada Music Ltd.
(Head Office)
13880 Mayfield Place
Richmond B. C., V6V 2E4
CANADA
☎ (604)270 - 6626

Roland Canada Music Ltd.
9425 Transcanadienne
Service Rd. N.,
St Laurent, Quebec H4S 1V3
CANADA
☎ (514)335 - 2009

Roland Canada Music Ltd.
346 Watline Avenue,
Mississauga, Ontario L4Z 1X2
CANADA
☎ (416)890 - 6488

AUSTRALIA

Roland Corporation
(Australia) Pty. Ltd.
(Head Office)
38 Campbell Avenue
Dee Why West NSW 2099
AUSTRALIA
☎ (02)982 - 8266

Roland Corporation
(Australia) Pty. Ltd.
(Melbourne Office)
50 Garden Street
South Yarra, Victoria 3141
AUSTRALIA
☎ (03)241 - 1254

NEW ZEALAND

Roland Corporation (NZ) Ltd.
97 Mt. Eden Road, Mt. Eden,
Auckland 3
NEW ZEALAND
☎ (09)398 - 715

UNITED KINGDOM

Roland(UK)Ltd.
Amalgamated Drive
West Cross Centre, Brentford,
Middlesex TW8 9EZ,
UNITED KINGDOM
☎ (81)568 - 4578

WEST GERMANY

Roland Elektronische
Musikinstrumente
Handelsgesellschaft mbH.
Oststrasse 96,
2000 Norderstedt
WEST GERMANY
☎ 040/52 60 090

BELGIUM/HOLLAND/ LUXEMBOURG

Roland Benelux N. V.
Houtstraat 1
B - 2431 Oevel - Westerlo
BELGIUM
☎ 014 - 58 45 35

DENMARK

Roland Scandinavia A/S
Langebrogade 6
Box 1937
DK - 1023 Copenhagen K.
DENMARK
☎ 31 - 95 31 11

SWEDEN

Roland Scandinavia A/S
DanvikCenter 28 A, 2 tr.
S - 131 30 Nacka,
SWEDEN
☎ 08 - 702 00 20

NORWAY

Roland Scandinavia
Avd. Norge
Lilleakerveien 2
Postboks 95 Lilleaker
N - 0216 Oslo 2
NORWAY
☎ 02 - 73 00 74

FINLAND

Fazer Musik Inc.
Länsituulentie
POB 169
SF - 02101 Espoo
FINLAND
☎ 0 - 43 50 11

ITALY

Roland Italy S. P. A.
Viale delle Industrie 8
20020 ARESE MILANO
ITALY
☎ 02 - 93581311

SPAIN

Roland Electronics
de España S. A.
Bolivia 239
08020 Barcelona
SPAIN
☎ 93 - 308 - 1000

SWITZERLAND

Musitronic AG
Gerberstrasse 5, CH - 4410
Liestal
SWITZERLAND
☎ 061/921 16 15

Roland CK (Switzerland) AG
Hauptstrasse 21
CH - 4456 Tenniken
SWITZERLAND
☎ 061/98 60 55
Repair Service by Musitronic AG

FRANCE

Musikengro
102, Avenue Jean - Jaures
69007 Lyon Cedex 07
FRANCE
☎ (7)858 - 54 60

Musikengro
(Paris Office)
Centre Region Parisienne
41 rue Charles - Fourier,
94400 Vitry s/Seine
FRANCE
☎ (1)4680 86 62

AUSTRIA

E. Dematte & Co.
Neu - Rum Siemens - Strasse 4
A - 6021 Innsbruck Box 591
AUSTRIA
☎ 43(05222)63 451

GREECE

V. Dimitriadis & Co. Ltd.
2 Fidiou Str., GR 106 78
Athens
GREECE
☎ 3620130

PORTUGAL

Casa Caius Instrumentos
Musicais Lda
Rua de Santa Catarina 131
Porto
PORTUGAL
☎ 02 - 38 44 56

HUNGARY

Intermusica Ltd.
Warehouse Area "DEPO"
Budapest P.O. Box 3,
2045 Torokbajmt
Budapest
HUNGARY
☎ 1868905

BRAZIL

Oliver do Brazil S.A.
Instrumentos Musicais
Av. Cecl. No.578
Centro Empresarial
Tambore - Barueri - SP
CEP - 06400
BRAZIL
☎ (011)709 - 1267

Roland®

10610

UPC

10610



10981

Roland®