

***** ROLAND PMA-5 TURBO FACTS *****

The PMA-5 is a great song writing and accompaniment instrument for anyone. It is the first hand-held music workstation that is completely driven from a touch-screen. It is extremely user friendly and has everything you'd expect from a music workstation: GM/GS compatible synthesizer with 306 sounds, 16 drum kits, 8 track sequencer with 20 song memory, serial port for direct connection to any computer, and 600 built-in patterns in 100 different styles. Six AA batteries give you approximately 5 hours of portable operation. With a little creativity and a set of headphones, the PMA-5 gives you the flexibility to create and produce songs anytime and anywhere.

• Initializing/Screen Calibration

- 1) Touch VALUE with the Stylus while powering on.
- 2) Touch the lower left and upper right corners of the screen to Calibrate.
- 3) Touch 'Exec' to Initialize.

• Playing the Demo Song

- 1) Touch the Song Number and drag upward, or use the VALUE buttons to select S21:Finale Demo.
- 2) Touch the Play (>) button. Touch Stop (□) and use Fwd (>>) or Rew (<<) to select a specific measure.

• Playing Preset Patterns

- 1) Touch STYLE.
- 2) Touch the Play (>) button.
- 3) Touch the Pattern Number and drag up/down, or use the VALUE buttons to select other patterns.
- 4) Touch Stop (□) when finished.

• Choosing Variation Patterns

In Preset Style mode, the PMA-5 has 600 patterns in 100 styles. Each style is comprised of 6 patterns – I= Intro, A= Verse, 1= Fill, B= Chorus, 2= Fill, E=Ending
To choose a variation pattern:

- 1) Select a Preset Pattern and touch Play (>).
- 2) Touch the character (I, A, 1, B, 2, E) to the right of the Style Name. It will begin to blink.
- 3) Use the VALUE buttons to select other patterns within that Style.

• Playing the Sounds

The PMA-5 has 306 Preset instrument sounds and 16 drum kits.

- 1) Select a User Pattern by touching 'P' and then VALUE +. The 'P' should now be a 'U.'
- 2) Touch the right PAGE ARROW button one time.
- 3) Touch the Instrument Group [in brackets] and use the VALUE buttons to select an Inst. Group.
- 4) Touch the Instrument Name [the word below the brackets] and drag up/down or, use the VALUE buttons to select an Instrument.
- 5) Touch the on screen keyboard to play the sound. Touch the arrows next to the OCTAVE button to change the keyboard range.

• Recording a User Pattern

The PMA-5 has 200 User Patterns. A pattern has four tracks: Accompaniment 1 & 2, Bass and Drums.

- 1) Use previous steps to select a blank User Pattern.
- 2) Touch the right PAGE ARROW button one time.
- 3) Under STYLE touch 'Dr'. Use previous steps to select a kit and touch ENTER.
- 4) Touch SAVE.
- 5) Touch the right PAGE ARROW button one time.
- 6) Use the VALUE buttons to set the pattern length.
- 7) Touch the Record (O) button.
- 8) Touch the time signature, tempo, & quantize (Qtz) values and use the VALUE buttons to change them.
- 9) Audition the sound by touching the on screen keyboard.
- 10) To begin recording, touch the Play (>) button.
- 11) Touch Stop (□) when finished.
- 12) To continue recording more tracks, touch EXIT followed by the right PAGE ARROW and select a new track and instrument as in step 3, then repeat steps 4-11.

• Creating A Style Track for a Song

A song in the PMA-5 consists of a Style Track, a Chord Track, and up to 4 melody tracks. Use the following procedure to create a Style Track.

- 1) Touch 'SONG'.
- 2) Select a blank song (Touch the number next to S and use the VALUE buttons to change songs).
- 3) Touch 'STYLE Tr.' and then touch the Step button.
- 4) Touch the '+ : + + + +' area and drag up/down to select a Preset or User pattern.
- 5) Touch ENTER to confirm the pattern you chose.
- 6) Continue this process and touch EXIT when done.
- 7) Touch Top (I<) followed by Play (>) to hear the song from the beginning.

• Creating a Chord Track

- 1) Touch 'CHORD Tr.'
- 2) Touch Top (I<) followed by STEP.
- 3) Select a chord root by touching the left side of the on screen keyboard and a chord quality by touching the right side.
- 4) Touch the Chord Symbol (Ex.Cm7) to hear the chord.
- 5) Touch ENTER to confirm the chord.
- 6) Touch Fwd (>>) to advance to the next measure.
- 7) Repeat steps 4 – 6 to continue entering chord changes. Touch EXIT when finished.

• Mixing Functions

- 1) Touch Play (>) followed by MIX.
- 2) Touch and drag the faders to change track volume.
- 3) Touch the right PAGE ARROW button to access faders for Panning, Reverb and Chorus levels.
- 4) Touch ENTER to save these level settings.
- 5) To mute a track, touch MUTE and then touch any track you wish to mute. Turn on the SOLO switch to solo a track.