

ARTcessories™

Creative audio solutions in cool little boxes.

March 2003

MacroMIX

Four Channel Personal Mixer



Problem: You need to mix a CD and a VCR's audio output with a synthesizer and the line output of a bass amp and send it all to a PC or cassette deck.

Solution: Connect an MacroMIX between your audio sources and the PC or cassette deck. Levels can be mixed and a headphone jack lets you monitor the mix.


Specifications:

- Four input channels, Ch 1 and 2 have dual mono summed RCA inputs, with Ch 3 you have a choice of one 1/4" or dual mono summed RCA inputs and Ch 4 has a 1/4" unbalanced input
- Four Level controls, one for each channel
- Dual Mono RCA Output
- 1/4" Line Out/Mono Headphone output jack
- Active preamplification and mixing circuitry
- Input Impedance: 10K ohms unbalanced (all inputs)
- Max Gain: +40dB
- S/N Ratio: >90dB
- THD: <0.008%
- IMD (SMPTE): <0.008%
- Power: 12V DC (Adapter included)
- Dimensions: 5.625 x 3.75 x 1.75 inches (143mm x 92mm x 45mm)
- Weight: 1.6 lbs (725g)

Usage:

- a.) Connect the AC adapter cable to the 12V DC Input on the MacroMIX, and plug the other end into a 120V AC power outlet.

- b.) Connect your various signal sources to the appropriate Inputs on the MacroMIX with unbalanced shielded cables. Electric instruments or amplifier line outputs would go to the 1/4" input on channel 3 and/or 4. Stereo sources (tape deck, CD player, etc.) would be connected to the RCA Inputs on channels 1 and 2.
- c.) Connect mono headphones to the Line/Headphone output. Alternatively, this jack can be connected to the mono input of a powered monitor speaker or a headphone amplifier if added headphone loudness is required.
- d.) Connect the MacroMIX's dual mono RCA Outputs to the L&R inputs on your tape deck, PC, or a PA mixer with input.
- e.) Adjust the Level controls for the desired mix.

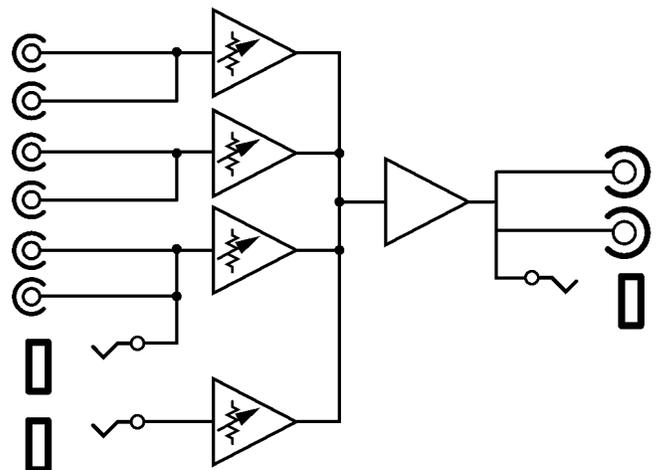

90 DAY WARRANTY